

What to do if ...

List of Warning/Indicator Lights

Stop the vehicle immediately. Continuing to drive the vehicle may be dangerous.



(U.S.A.)  
Brake system warning light



(Canada)

Stop the vehicle immediately.



Charging system warning light

Have the vehicle inspected immediately.



(U.S.A.)  
Malfunction indicator lamp



(Canada)



SRS warning light



(U.S.A.)  
ABS warning light



(Canada)



(Comes on)

Slip indicator



Brake system warning light



Electric power steering system warning light



(Flashes)

Pre-collision system warning light<sup>\*1</sup>



(Blinking and then continuously on)

Tire pressure warning light



(Flashes)

Cruise control indicator



(Flashes)

"AFS OFF" indicator



(Flashes)

Automatic High Beam indicator<sup>\*1</sup>

Follow the correction procedures.



Open door warning light



(In the fuel gauge)

Low fuel level warning light



Driver's seat belt reminder light



(On the center panel)

Front passenger's seat belt reminder light



(Illuminates without blinking)

Tire pressure warning light<sup>\*2</sup>

 













Master warning light

For further information, refer to the Owner's Manual.

What to do if ...

See the Owner's Manual

|   |   |   |  |
|---|---|---|--|
|  | Turn signal indicator                       |  | Cruise control indicator   |
|  | Headlight high beam indicator               |  | "AFS OFF" indicator  |
|  | Automatic High Beam indicator <sup>*1</sup> |  | Slip indicator<br>(Flashes)                                      |
|  | Headlight indicator (U.S.A.)                |  | VSC off indicator  |
|  | Tail light indicator (Canada)               |  | Brake hold standby indicator                                     |
|  | Front fog light indicator                   |  | Brake hold operated indicator                                    |
|  | "ECT PWR" indicator                         |  | (U.S.A.) Parking brake indicator                                 |
|  | "ECT SNOW" indicator                        |  | (Canada)   |
|  | Eco Driving Indicator Light                 |  | Lane keeping assist indicator <sup>*1</sup>                      |
|  | "ECO MODE" indicator                        |  | "AIR BAG ON" and "AIR BAG OFF" indicators (without touch screen) |
|  | "SPORT" mode indicator <sup>*1</sup>        |  | "AIR BAG ON" and "AIR BAG OFF" indicators (with touch screen)    |
|  | "COMFORT" mode indicator <sup>*1</sup>      |  | "HEIGHT HIGH" indicator <sup>*1</sup>                            |

For further information, refer to the Owner's Manual.

<sup>\*1</sup>: If equipped

<sup>\*2</sup>: Turn on due to natural causes such as natural air leaks or tire inflation pressure changes caused by temperature including the spare tire. Adjust the tire inflation pressure to the specified level. The light will turn off after a few minutes. In case the light does not turn off even if the tire inflation pressure is adjusted, have the system checked by your Lexus dealer.

## Spare Tire and Tool Compartment

### Jack, tools, and spare tire



- 1 Jack handle
- 2 Spare tire
- 3 Wheel nut wrench
- 4 Jack


### Taking out the spare tire



- 1 Lift up the panel on the trunk floor.
- 2 Loosen the center fastener and remove the spare tire.

## If the electronic key does not operate properly

### Unlocking and locking the doors

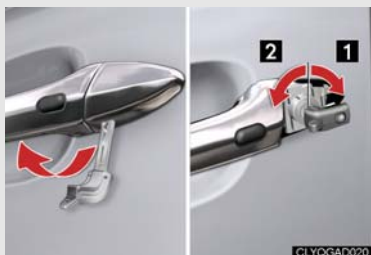

To unlock or lock the vehicle, use the mechanical key to remove the lock cover on the driver's door handle. The mechanical key is stored inside the electronic key.

- 1 Unlocks
- 2 Locks

## What to do if ...

### Starting the engine




- 1 Depress the brake pedal.
- 2 Touch the Lexus emblem side of the electronic key to the "ENGINE START STOP" switch.
- 3 Press the "ENGINE START STOP" switch within 10 seconds of the buzzer, keeping the brake pedal depressed.

\*: If equipped

If the electronic key battery becomes depleted, replace it with a new battery. For instructions on replacing the battery, refer to the Owner's Manual. If you need further assistance, contact your Lexus dealer.

### If the engine doesn't start

Make sure that the correct operating procedures have been followed.

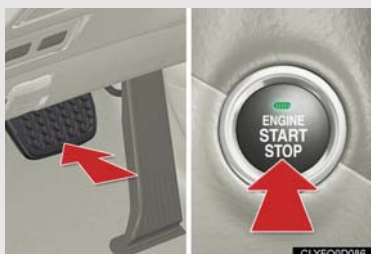

#### Brake pedal

Make sure that the brake pedal is firmly depressed when attempting to start the engine.  
(→P.22)



#### Steering wheel lock

Make sure that the steering wheel lock is released.

To release it, press the "ENGINE START STOP" switch while gently turning the wheel left or right.  
(→P.12)

If the engine still does not start, see the Owner's Manual for more information or contact your Lexus dealer.

## Electronic Key Alarm

The electronic key alarm uses an alarm and warning messages to indicate that the electronic key has been used improperly. Take appropriate measure in response to any warning messages that are displayed. In some cases, an alarm may sound without an accompanying warning message. If so, follow the correction procedure in the table below.

| Alarm                                      | Situation  | Correction procedure   |
|--|--|--|
| Exterior alarm sounds once for 2 seconds.  | An attempt was made to lock the doors using the entry function while the electronic key was still inside the passenger compartment.  | Retrieve the electronic key from the passenger compartment and lock the doors again. |
|  | The trunk was closed with the electronic key inside and all doors were locked.   | Retrieve the electronic key from the trunk and close the trunk lid.                  |
| Exterior alarm sounds once for 60 seconds. | An attempt was made to exit the vehicle and lock the doors while carrying the electronic key without first turning the "ENGINE START STOP" switch OFF.                                     | Turn the "ENGINE START STOP" switch OFF and lock the doors again.                    |
| Exterior alarm sounds once for 10 seconds. | An attempt was made to lock the vehicle while a door was open.   | Close all of the doors and lock the doors again.                                     |
| Interior alarm pings continuously.         | The "ENGINE START STOP" switch was turned to ACCESSORY mode while the driver's door was open (or the driver's door was opened while the "ENGINE START STOP" switch was in ACCESSORY mode). | Turn the "ENGINE START STOP" switch OFF and close the driver's door.                 |
|  | The "ENGINE START STOP" switch was turned OFF while the driver's door was open.  | Close the driver's door.   |

## What to do if ...

| Alarm  | Situation  | Correction procedure   |
|--|--|--|
| Interior alarm sounds continuously. <sup>*1</sup>                          | When the "ENGINE START STOP" switch is in IGNITION ON or ACCESSORY mode, an attempt was made to open the door and exit the vehicle, and the shift lever was not in "P".                  | Shift the shift lever to "P" and turn the "ENGINE START STOP" switch OFF.                                |
| Interior and exterior alarms sound continuously. <sup>*1</sup>             | When the "ENGINE START STOP" switch is in IGNITION ON or ACCESSORY mode, the driver's door was closed after the key was carried outside the vehicle, and the shift lever was not in "P". | Shift the shift lever to "P", turn the "ENGINE START STOP" switch OFF and close the driver's door again. |
| Interior alarm pings once. <sup>*1</sup>                                   | The electronic key has a low battery.  | Replace the electronic key battery.  |
|  | An attempt was made to start the engine without the electronic key being present, or the electronic key was not functioning normally.  | Start the engine with the electronic key present. <sup>*2</sup>  |
| Interior alarm pings once and exterior alarm sounds 3 times. <sup>*1</sup> | The driver's door was closed after the key was carried outside the vehicle, and the "ENGINE START STOP" switch was not turned OFF.   | Turn the "ENGINE START STOP" switch OFF and close the driver's door again.                               |
|  | An occupant carried the electronic key outside the vehicle and closed the door while the "ENGINE START STOP" switch was not OFF.   | Bring the electronic key back into the vehicle.  |

<sup>\*1</sup>: A message will be shown on the multi-information display in the instrument cluster.

<sup>\*2</sup>: If the engine does not start when the electronic key is inside the vehicle, the electronic key battery may be depleted or there may be difficulties receiving the signal from the key.